



www.triomotion.com

FAQ

Programming: Encoder Output signals

Q. Can I link encoder position between two independent Trio controllers?

A. Yes !

The MC206 can change a stepper output to encoder output by a single command !

Just set MICROSTEP=ON for any stepper axis.

With this feature, you can electronically gear / link position from one controller to another.

Application include having a Master MC206 and several Slave MC206s' that can be position 'synched' to an encoder.