



www.triomotion.com

FAQ

Interfacing to NPN devices

Q. How do I connect an NPN (sinking) output to a Trio PNP (sourcing) input?

A. A suitable converter will be required. For more information see the Technical Note TN30_01 “Connecting to NPN outputs”.

Also, Keyence makes a DIN-rail mountable terminal for converting NPN to PNP.
Part No: **OP-5148**